



ENGLISH

Kettle VT-1173 TR

Description

- Body
- Water level scale
- Mesh filter
- Lid
- Lid opening button
- Handle
- On/Off button "0/1"
- Operation indicator
- Support

Attention!

For additional protection it is expedient to install a residual current device (RCD) with nominal current of operation not exceeding 30 mA. To install RCD contact a specialist.

SAFETY MEASURES

Before using the electric kettle, read this instruction carefully. Keep this manual during the whole operation period.

- Use the unit according to its intended purpose only and follow the instruction.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the housing.
- Power cord is equipped with "euro-plug". Insert it into the socket of reliable grounding type.
- In order to avoid risk of fire do not use adapters while connecting the kettle to the outlet.
- Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.
- Do not use the kettle near heat sources and open flame.
- Do not use the kettle outdoors.
- Do not touch the kettle body or handle with wet hands.
- Do not leave the operating kettle unattended.
- Place the kettle on the flat stable surface; do not place the kettle on the edge of the table.
- Before switching on the kettle make sure that it is placed on the support evenly.
- Use only the support supplied with the unit.
- Do not let the cord hang over the edge of a table, or touch hot surfaces. You can adjust the power cord length, winding it over the support.
- Do not switch on the kettle if it is empty.
- Do not fill the kettle with water when it stands on the support.
- Do not use the kettle without filter or if the lid is not closed firmly.
- Use the kettle only for water boiling. It is prohibited to heat or boil other liquids.
- Provide that water level is not below the minimum mark and not above the maximal mark. If water level exceeds the maximal mark, boiling water can splash out.
- In order to avoid getting of burns by hot steam, do not bend over the nose of the kettle while it is operating.
- Do not open the kettle lid while boiling.
- Do not touch hot surfaces of the kettle. Take the handle.
- Be careful while carrying the kettle filled with boiling water.
- Do not remove the operating kettle from the support. If you need to take the kettle off, switch it off and then remove it from the support.
- Unplug the kettle before cleaning or when you do not use it. Unplugging the kettle, do not pull the cord, hold the plug.
- In order to avoid electric shock do not immerse the unit and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Do not allow children to use the kettle as a toy.
- This unit is not intended for usage by children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the unit away from children.
- Check the power cord and the plug periodically. Do not use the kettle if there are damages in the body or in the power cord.
- Do not repair the unit by yourself. If you find any damages, unplug the unit and apply to the authorized service center.

- Before cleaning, disconnect the unit from the power source, pour out water from the unit and let the unit cool down completely.
- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
- Do not immerse the kettle and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Regularly clean the filter (3) of the kettle from dirt. Place the kettle in a way that the spout is turned towards you, pull the clamp on the lower part of the filter and remove it.
- Wash the filter, insert it into the fastening slots and press the lower part of the filter for fixing it.

- Remove scale
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.
- To remove scale, fill the kettle till the maximal mark with water with vinegar dissolved in proportion 2:1.
- Boil water and leave the unit overnight. In the morning pour out the liquid, fill the kettle with water till maximum mark, boil and pour out water.
- You can use special substances for electric kettles to remove scale.
- Clean the kettle from scale regularly.

- Storage
- Before taking the kettle away for storage, unplug it, pour out water and let the children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the kettle away from children in a dry cool place.

- Delivery set
- Kettle with filter – 1 pcs.
- Support – 1 pcs.
- Instruction – 1 pcs.

- Technical specifications
- Power supply: 220-240 V – 50 Hz
- Power capacity: 1850-2200 W
- Maximal water capacity: 1.7 L

- Guarantee
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- Before the first usage
- Unpack the kettle.
- Make sure that your home electricity supply corresponds to the operating voltage of current specified on the housing.
- Insert the plug into the socket.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

DEUTSCH

Wasserkocher VT-1173 TR

Beschreibung

- Gehäuse
- Wasserstandsanzeiger
- Siebfilter
- Deckel
- Taste der Deckelöffnung
- Griff
- Ein-/Ausstattlaste -0/1-
- Wasserstandsanzeiger
- Untersatz

Achtung!

Zusätzlicher Schutz ist es zweckmäßig, den FI-Schalter mit Nennstrom maximal bis 30 mA im Stromversorgungskreis aufzustellen. Wenden Sie sich dafür an einen Spezialisten.

Before using the kettle make sure that the on/off button (7) is not blocked by any foreign objects, and the lid (4) is firmly closed, otherwise auto switch off of the kettle is not possible.

- Before removing the kettle from the support make sure that the kettle is switched off and the on/off button (7) is in position "0".
- Insert the plug into the socket.
- To fill the kettle with water take it off from the support (9), open the lid (4), by pressing the (5) button.
- Place the filled kettle on the support (9).
- Switch on the kettle by pressing the button (7), the indicator will light up.
- When water starts boiling, the kettle will switch off automatically.
- Before taking off the kettle from the support (9) make sure it is switched off.
- After switching off the kettle wait for 10-20 seconds, then you can switch it on again for boiling.
- If you accidentally switched on the kettle, but the water level appeared to be below the minimal mark, the kettle switches off automatically. In this case take the kettle from the support (9), let it cool down for 5-10 minutes, then fill it with water and switch on, the kettle will operate in normal mode.

- Before cleaning, disconnect the unit from the power source, pour out water from the unit and let the unit cool down completely.
- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
- Do not immerse the kettle and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Regularly clean the filter (3) of the kettle from dirt. Place the kettle in a way that the spout is turned towards you, pull the clamp on the lower part of the filter and remove it.
- Wash the filter, insert it into the fastening slots and press the lower part of the filter for fixing it.

- Remove scale
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.
- To remove scale, fill the kettle till the maximal mark with water with vinegar dissolved in proportion 2:1.
- Boil water and leave the unit overnight. In the morning pour out the liquid, fill the kettle with water till maximum mark, boil and pour out water.
- You can use special substances for electric kettles to remove scale.
- Clean the kettle from scale regularly.

- Storage
- Before taking the kettle away for storage, unplug it, pour out water and let the children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the kettle away from children in a dry cool place.

- Delivery set
- Kettle with filter – 1 pcs.
- Support – 1 pcs.
- Instruction – 1 pcs.

- Technical specifications
- Power supply: 220-240 V – 50 Hz
- Power capacity: 1850-2200 W
- Maximal water capacity: 1.7 L

- Guarantee
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- Before the first usage
- Unpack the kettle.
- Make sure that your home electricity supply corresponds to the operating voltage of current specified on the housing.
- Insert the plug into the socket.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

РУССКИЙ

Wasserkocher VT-1173 TR

Описание

- Корпус
- Шкала уровня воды
- Сетчатый фильтр
- Крышка
- Кнопка открытия крышки
- Сыбы
- «0/1»-иске косу/айыруу пернесі
- Индикатор работы
- Подставка

Внимание!

Для дополнительной защиты целесообразно установить в цепи питания устройство защитного отключения (УЗО) с номинальным током срабатывания, не превышающим 30 мА. Для установки УЗО следует обратиться к специалисту.

Before using the kettle make sure that the on/off button (7) is not blocked by any foreign objects, and the lid (4) is firmly closed, otherwise auto switch off of the kettle is not possible.

- Before removing the kettle from the support make sure that the kettle is switched off and the on/off button (7) is in position "0".
- Insert the plug into the socket.
- To fill the kettle with water take it off from the support (9), open the lid (4), by pressing the (5) button.
- Place the filled kettle on the support (9).
- Switch on the kettle by pressing the button (7), the indicator will light up.
- When water starts boiling, the kettle will switch off automatically.
- Before taking off the kettle from the support (9) make sure it is switched off.
- After switching off the kettle wait for 10-20 seconds, then you can switch it on again for boiling.
- If you accidentally switched on the kettle, but the water level appeared to be below the minimal mark, the kettle switches off automatically. In this case take the kettle from the support (9), let it cool down for 5-10 minutes, then fill it with water and switch on, the kettle will operate in normal mode.

- Before cleaning, disconnect the unit from the power source, pour out water from the unit and let the unit cool down completely.
- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
- Do not immerse the kettle and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Regularly clean the filter (3) of the kettle from dirt. Place the kettle in a way that the spout is turned towards you, pull the clamp on the lower part of the filter and remove it.
- Wash the filter, insert it into the fastening slots and press the lower part of the filter for fixing it.

- Remove scale
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.
- To remove scale, fill the kettle till the maximal mark with water with vinegar dissolved in proportion 2:1.
- Boil water and leave the unit overnight. In the morning pour out the liquid, fill the kettle with water till maximum mark, boil and pour out water.
- You can use special substances for electric kettles to remove scale.
- Clean the kettle from scale regularly.

- Storage
- Before taking the kettle away for storage, unplug it, pour out water and let the children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the kettle away from children in a dry cool place.

- Delivery set
- Kettle with filter – 1 pcs.
- Support – 1 pcs.
- Instruction – 1 pcs.

- Technical specifications
- Power supply: 220-240 V – 50 Hz
- Power capacity: 1850-2200 W
- Maximal water capacity: 1.7 L

- Guarantee
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- Before the first usage
- Unpack the kettle.
- Make sure that your home electricity supply corresponds to the operating voltage of current specified on the housing.
- Insert the plug into the socket.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

ENGLISH

Wasserkocher VT-1173 TR

Description

- Body
- Water level scale
- Mesh filter
- Lid
- Lid opening button
- Handle
- On/Off button "0/1"
- Operation indicator
- Support

Attention!

For additional protection it is expedient to install a residual current device (RCD) with nominal current of operation not exceeding 30 mA. To install RCD contact a specialist.

SAFETY MEASURES

- Use the unit according to its intended purpose only and follow the instruction.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the housing.
- Power cord is equipped with "euro-plug". Insert it into the socket of reliable grounding type.
- In order to avoid risk of fire do not use adapters while connecting the kettle to the outlet.
- Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.
- Do not use the kettle near heat sources and open flame.
- Do not use the kettle outdoors.
- Do not touch the kettle body or handle with wet hands.
- Do not leave the operating kettle unattended.
- Place the kettle on the flat stable surface; do not place the kettle on the edge of the table.
- Before switching on the kettle make sure that it is placed on the support evenly.
- Use only the support supplied with the unit.
- Do not let the cord hang over the edge of a table, or touch hot surfaces. You can adjust the power cord length, winding it over the support.
- Do not switch on the kettle if it is empty.
- Do not fill the kettle with water when it stands on the support.
- Do not use the kettle without filter or if the lid is not closed firmly.
- Use the kettle only for water boiling. It is prohibited to heat or boil other liquids.
- Provide that water level is not below the minimum mark and not above the maximal mark. If water level exceeds the maximal mark, boiling water can splash out.
- In order to avoid getting of burns by hot steam, do not bend over the nose of the kettle while it is operating.
- Do not open the kettle lid while boiling.
- Do not touch hot surfaces of the kettle. Take the handle.
- Be careful while carrying the kettle filled with boiling water.
- Do not remove the operating kettle from the support. If you need to take the kettle off, switch it off and then remove it from the support.
- Unplug the kettle before cleaning or when you do not use it. Unplugging the kettle, do not pull the cord, hold the plug.
- In order to avoid electric shock do not immerse the unit and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Do not allow children to use the kettle as a toy.
- This unit is not intended for usage by children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the unit away from children.
- Check the power cord and the plug periodically. Do not use the kettle if there are damages in the body or in the power cord.
- Do not repair the unit by yourself. If you find any damages, unplug the unit and apply to the authorized service center.

- Before cleaning, disconnect the unit from the power source, pour out water from the unit and let the unit cool down completely.
- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
- Do not immerse the kettle and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Regularly clean the filter (3) of the kettle from dirt. Place the kettle in a way that the spout is turned towards you, pull the clamp on the lower part of the filter and remove it.
- Wash the filter, insert it into the fastening slots and press the lower part of the filter for fixing it.

- Remove scale
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.
- To remove scale, fill the kettle till the maximal mark with water with vinegar dissolved in proportion 2:1.
- Boil water and leave the unit overnight. In the morning pour out the liquid, fill the kettle with water till maximum mark, boil and pour out water.
- You can use special substances for electric kettles to remove scale.
- Clean the kettle from scale regularly.

- Storage
- Before taking the kettle away for storage, unplug it, pour out water and let the children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the kettle away from children in a dry cool place.

- Delivery set
- Kettle with filter – 1 pcs.
- Support – 1 pcs.
- Instruction – 1 pcs.

- Technical specifications
- Power supply: 220-240 V – 50 Hz
- Power capacity: 1850-2200 W
- Maximal water capacity: 1.7 L

- Guarantee
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- Before the first usage
- Unpack the kettle.
- Make sure that your home electricity supply corresponds to the operating voltage of current specified on the housing.
- Insert the plug into the socket.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

РУССКИЙ

Wasserkocher VT-1173 TR

Описание

- Корпус
- Шкала уровня воды
- Сетчатый фильтр
- Крышка
- Кнопка открытия крышки
- Сыбы
- «0/1»-иске косу/айыруу пернесі
- Индикатор работы
- Подставка

Внимание!

Для дополнительной защиты целесообразно установить в цепи питания устройство защитного отключения (УЗО) с номинальным током срабатывания, не превышающим 30 мА. Для установки УЗО следует обратиться к специалисту.

BEZOPASNOСТИ

- Use the unit according to its intended purpose only and follow the instruction.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the housing.
- Power cord is equipped with "euro-plug". Insert it into the socket of reliable grounding type.
- In order to avoid risk of fire do not use adapters while connecting the kettle to the outlet.
- Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.
- Do not use the kettle near heat sources and open flame.
- Do not use the kettle outdoors.
- Do not touch the kettle body or handle with wet hands.
- Do not leave the operating kettle unattended.
- Place the kettle on the flat stable surface; do not place the kettle on the edge of the table.
- Before switching on the kettle make sure that it is placed on the support evenly.
- Use only the support supplied with the unit.
- Do not let the cord hang over the edge of a table, or touch hot surfaces. You can adjust the power cord length, winding it over the support.
- Do not switch on the kettle if it is empty.
- Do not fill the kettle with water when it stands on the support.
- Do not use the kettle without filter or if the lid is not closed firmly.
- Use the kettle only for water boiling. It is prohibited to heat or boil other liquids.
- Provide that water level is not below the minimum mark and not above the maximal mark. If water level exceeds the maximal mark, boiling water can splash out.
- In order to avoid getting of burns by hot steam, do not bend over the nose of the kettle while it is operating.
- Do not open the kettle lid while boiling.
- Do not touch hot surfaces of the kettle. Take the handle.
- Be careful while carrying the kettle filled with boiling water.
- Do not remove the operating kettle from the support. If you need to take the kettle off, switch it off and then remove it from the support.
- Unplug the kettle before cleaning or when you do not use it. Unplugging the kettle, do not pull the cord, hold the plug.
- In order to avoid electric shock do not immerse the unit and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Do not allow children to use the kettle as a toy.
- This unit is not intended for usage by children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the unit away from children.
- Check the power cord and the plug periodically. Do not use the kettle if there are damages in the body or in the power cord.
- Do not repair the unit by yourself. If you find any damages, unplug the unit and apply to the authorized service center.

- Before cleaning, disconnect the unit from the power source, pour out water from the unit and let the unit cool down completely.
- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
- Do not immerse the kettle and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Regularly clean the filter (3) of the kettle from dirt. Place the kettle in a way that the spout is turned towards you, pull the clamp on the lower part of the filter and remove it.
- Wash the filter, insert it into the fastening slots and press the lower part of the filter for fixing it.

- Remove scale
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.
- To remove scale, fill the kettle till the maximal mark with water with vinegar dissolved in proportion 2:1.
- Boil water and leave the unit overnight. In the morning pour out the liquid, fill the kettle with water till maximum mark, boil and pour out water.
- You can use special substances for electric kettles to remove scale.
- Clean the kettle from scale regularly.

- Storage
- Before taking the kettle away for storage, unplug it, pour out water and let the children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the kettle away from children in a dry cool place.

- Delivery set
- Kettle with filter – 1 pcs.
- Support – 1 pcs.
- Instruction – 1 pcs.

- Technical specifications
- Power supply: 220-240 V – 50 Hz
- Power capacity: 1850-2200 W
- Maximal water capacity: 1.7 L

- Guarantee
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- Before the first usage
- Unpack the kettle.
- Make sure that your home electricity supply corresponds to the operating voltage of current specified on the housing.
- Insert the plug into the socket.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

РУССКИЙ

Wasserkocher VT-1173 TR

Описание

- Корпус
- Шкала уровня воды
- Сетчатый фильтр
- Крышка
- Кнопка открытия крышки
- Сыбы
- «0/1»-иске косу/айыруу пернесі
- Индикатор работы
- Подставка

Внимание!

Для дополнительной защиты целесообразно установить в цепи питания устройство защитного отключения (УЗО) с номинальным током срабатывания, не превышающим 30 мА. Для установки УЗО следует обратиться к специалисту.

BEZOPASNOСТИ

- Use the unit according to its intended purpose only and follow the instruction.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the housing.
- Power cord is equipped with "euro-plug". Insert it into the socket of reliable grounding type.
- In order to avoid risk of fire do not use adapters while connecting the kettle to the outlet.
- Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.
- Do not use the kettle near heat sources and open flame.
- Do not use the kettle outdoors.
- Do not touch the kettle body or handle with wet hands.
- Do not leave the operating kettle unattended.
- Place the kettle on the flat stable surface; do not place the kettle on the edge of the table.
- Before switching on the kettle make sure that it is placed on the support evenly.
- Use only the support supplied with the unit.
- Do not let the cord hang over the edge of a table, or touch hot surfaces. You can adjust the power cord length, winding it over the support.
- Do not switch on the kettle if it is empty.
- Do not fill the kettle with water when it stands on the support.
- Do not use the kettle without filter or if the lid is not closed firmly.
- Use the kettle only for water boiling. It is prohibited to heat or boil other liquids.
- Provide that water level is not below the minimum mark and not above the maximal mark. If water level exceeds the maximal mark, boiling water can splash out.
- In order to avoid getting of burns by hot steam, do not bend over the nose of the kettle while it is operating.
- Do not open the kettle lid while boiling.
- Do not touch hot surfaces of the kettle. Take the handle.
- Be careful while carrying the kettle filled with boiling water.
- Do not remove the operating kettle from the support. If you need to take the kettle off, switch it off and then remove it from the support.
- Unplug the kettle before cleaning or when you do not use it. Unplugging the kettle, do not pull the cord, hold the plug.
- In order to avoid electric shock do not immerse the unit and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Do not allow children to use the kettle as a toy.
- This unit is not intended for usage by children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the unit away from children.
- Check the power cord and the plug periodically. Do not use the kettle if there are damages in the body or in the power cord.
- Do not repair the unit by yourself. If you find any damages, unplug the unit and apply to the authorized service center.

- Before cleaning, disconnect the unit from the power source, pour out water from the unit and let the unit cool down completely.
- Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.
- Do not immerse the kettle and the support into water or other liquids.
- Do not wash the kettle and the support in a dishwashing machine.
- Regularly clean the filter (3) of the kettle from dirt. Place the kettle in a way that the spout is turned towards you, pull the clamp on the lower part of the filter and remove it.
- Wash the filter, insert it into the fastening slots and press the lower part of the filter for fixing it.

- Remove scale
- Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.
- To remove scale, fill the kettle till the maximal mark with water with vinegar dissolved in proportion 2:1.
- Boil water and leave the unit overnight. In the morning pour out the liquid, fill the kettle with water till maximum mark, boil and pour out water.
- You can use special substances for electric kettles to remove scale.
- Clean the kettle from scale regularly.

- Storage
- Before taking the kettle away for storage, unplug it, pour out water and let the children or disabled persons. In exceptional cases a person who is responsible for safety should give them all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Keep the kettle away from children in a dry cool place.

- Delivery set
- Kettle with filter – 1 pcs.
- Support – 1 pcs.
- Instruction – 1 pcs.

- Technical specifications
- Power supply: 220-240 V – 50 Hz
- Power capacity: 1850-2200 W
- Maximal water capacity: 1.7 L

- Guarantee
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- Before the first usage
- Unpack the kettle.
- Make sure that your home electricity supply corresponds to the operating voltage of current specified on the housing.
- Insert the plug into the socket.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

РУССКИЙ

