



ENGLISH

HOT AIR BRUSH

1. Operation modes switch
 2. Attachment release button
 3. Thermal brush
 4. Finger nozzle
 5. Nozzle
- ATTENTION!**
- Do not use the unit near containers filled with water (such as bath, swimming pool etc.).
 - When using the unit as a hairdryer, never immerse the power cord completely; if taken out of the socket, as water closeness is dangerous even if the unit is switched off.
 - For additional protection you can install a residual current device (RCD) with nominal current of operation not exceeding 30 mA into the bathroom mains; when installing, contact a specialist.
- SAFETY MEASURES**
- Before using the hot air brush, read the instruction manual carefully. Keep this instruction during the whole operation period.
- In order to avoid risk of electric shock:
- Before switching the unit on make sure that voltage of the mains corresponds to unit operating voltage.
 - Use the unit for intended purposes only, use only the attachments supplied with the unit.
 - Never leave the operating unit unattended.
 - Do not switch the unit on in places where aerosols or highly inflammable liquids are used.
 - Hair spray should be applied only after hair styling is finished.
 - Always unplug the unit immediately after usage and before cleaning.
 - When unplugging, pull the plug but not the cord.
 - Do not touch the power plug with wet hands.
 - Do not place and do not keep the unit in places, where it can fall into a bath or a sink, filled with water or do not immerse the unit into water or other liquids.
 - Do not use the unit while bathing.
 - When using the hot air brush in a bathroom, unplug the unit after usage that is take the plug out of the socket, as water closeness is dangerous even if the unit is switched off.
 - If the unit was dropped, unplug it immediately. And only then you can take it out of water.
 - For children safety do not leave polyethylene bags, used as a packaging, unattended.
- Attention! Do not allow children to play with polyethylene bags! Danger of suffocation!**
- Do not allow children to use the unit as a toy. Close supervision is necessary in case there are children or disabled persons near the operating unit.
 - This unit is not intended for usage by children or disabled persons unless they are given all the necessary instructions by a person who is responsible for their safety on safety measures and information about danger that can be caused by improper usage of the unit.
 - Do not use the unit when you are drowsy.
 - Take the switched on unit by its handle only.
 - Do not use the unit to style wet hair or synthetic fibers.
 - Do not direct hot air into your eyes or other heat-sensitive parts of your body.
 - Avoid contact of heated surfaces with your face, neck and other parts of your body.
 - Attachments get hot strongly during operation of the unit. Allow it to cool down before removal.
 - Never drop the unit or insert any object into any openings of hot air brush.
 - Never block the air inlets of the hot air brush, do not place it on a soft surface, such as a bedsheet, where the air inlets may be blocked. Keep the air inlets free of lint, dust and hair etc.
 - Avoid getting of hair into the air inlet grid during operation of the unit.
 - It is recommended to unwind the power cord to its full length while using the unit.
 - The power cord should not:
 - touch hot objects,
 - be immersed into water,
 - run over sharp edges,
 - be used as a handle for carrying the unit.
 - Make sure that the power cord and the plug are not damaged.
 - Never use the unit if the power cord or the plug is damaged, the unit works improperly or after it fell into water. Contact the authorized service center for all repair issues.
- THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**
- SWITCHING HOT AIR BRUSH ON**
- Before switching the unit on, make sure that your home mains voltage corresponds to the unit voltage.
 - Unplug the power cord completely.
 - Insert the power plug into the socket.
 - Use the switch (1) to set the necessary operating mode:
 - the hot air brush is off;
 - «cool shot» mode;
 - warm air supply for hair drying and soft styling;
 - hot air supply for quick hair drying and complex hair-styling;
- Thermal brush (3)**
- Use the thermal brush (3) for styling.
- Put the attachment to the unit body, pressing it till clamping. The arrow mark on the attach-

DEUTSCH

HAARTROCKNER MIT BÜRSTE

1. Betriebsstufenschalter
 2. Ablösestift zum Abnehmen der Aufsätze
 3. Thermobürste
 4. Kammaufsatz
 5. Konzentratort
- ACHTUNG!**
- Es ist nicht gestattet, das Gerät in der Nähe von Wasserbehältern oder Bädern (Badezimmerschrank usw.) zu benutzen.
 - Bei der Gerätekennzeichnung im Badezimmer trennen Sie das Gerät nach dem Betrieb vom Stromnetz ab, und zwar, ziehen Sie den Netzstecker aus dem Steckdose heraus, wenn die Nase des Wassers gefährlich ist, schließen Sie das Gerät sogar mittels Schalter abschaltbar.
 - Als zusätzlicher Schutz ist es zweckmäßig, den Fl-Schalter mit Mennbrinn bis 30 mA im Stromversorgungskreis des Badezimmers aufzustellen; wenn Sie dies tun, wenden Sie sich an einen elektrischen Sachverständigen.
- SICHERHEITSMASNAHMEN**
- Lesen Sie vor der ersten Inbetriebnahme des Haartrockners diese Bedienungsanleitung aufmerksam durch. Behalten Sie diese Bedienungsanleitung während der ganzen Betriebsperiode.
- In order to avoid risk of electric shock:
- Before switching the unit on make sure that voltage of the mains corresponds to unit operating voltage.
 - Use the unit for intended purposes only, use only the attachments supplied with the unit.
 - Never leave the operating unit unattended.
 - Do not switch the unit on in places where aerosols or highly inflammable liquids are used.
 - Hair spray should be applied only after hair styling is finished.
 - Always unplug the unit immediately after usage and before cleaning.
 - When unplugging, pull the plug but not the cord.
 - Do not touch the power plug with wet hands.
 - Do not place and do not keep the unit in places, where it can fall into a bath or a sink, filled with water or do not immerse the unit into water or other liquids.
 - Do not use the unit while bathing.
 - When using the hot air brush in a bathroom, unplug the unit after usage that is take the plug out of the socket, as water closeness is dangerous even if the unit is switched off.
 - If the unit was dropped, unplug it immediately. And only then you can take it out of water.
 - For children safety do not leave polyethylene bags, used as a packaging, unattended.
- Attention! Do not allow children to play with polyethylene bags! Danger of suffocation!**
- Do not allow children to use the unit as a toy. Close supervision is necessary in case there are children or disabled persons near the operating unit.
 - This unit is not intended for usage by children or disabled persons unless they are given all the necessary instructions by a person who is responsible for their safety on safety measures and information about danger that can be caused by improper usage of the unit.
 - Do not use the unit when you are drowsy.
 - Take the switched on unit by its handle only.
 - Do not use the unit to style wet hair or synthetic fibers.
 - Do not direct hot air into your eyes or other heat-sensitive parts of your body.
 - Avoid contact of heated surfaces with your face, neck and other parts of your body.
 - Attachments get hot strongly during operation of the unit. Allow it to cool down before removal.
 - Never drop the unit or insert any object into any openings of hot air brush.
 - Never block the air inlets of the hot air brush, do not place it on a soft surface, such as a bedsheet, where the air inlets may be blocked. Keep the air inlets free of lint, dust and hair etc.
 - Avoid getting of hair into the air inlet grid during operation of the unit.
 - It is recommended to unwind the power cord to its full length while using the unit.
 - The power cord should not:
 - touch hot objects,
 - be immersed into water,
 - run over sharp edges,
 - be used as a handle for carrying the unit.
 - Make sure that the power cord and the plug are not damaged.
 - Never use the unit if the power cord or the plug is damaged, the unit works improperly or after it fell into water. Contact the authorized service center for all repair issues.
- DAS GERÄT IST NUR FÜR DEN GEBRAUCH IM HAUSHALT GEIGNET**
- THIS PRODUCT CONFORMS TO THE EMC REQUIREMENTS AS Laid Down By The Council Directive 2004/108/EC AND TO THE Low Voltage Regulation (2006/95/EC)**
- Die Nutzungsdauer des Geräts beträgt 3 Jahre**
- Guarante**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.
- THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**
- INBETRIEBNAHME DES HAARTROCKNERS**
- Vergewissern Sie sich vor der Inbetriebnahme, dass die Spannung des Geräts mit der Netzelektrode übereinstimmt.
 - Stecken Sie den Netzstecker des Haartrockners in die Steckdose.
 - Wählen Sie die nötige Betriebsstufe mit dem Schalter (1):
 - der Haartrockner ist ausgeschaltet;
- Das vorliegende Produkt entspricht den Anforderungen der Richtlinie des Rates für die Verträglichkeit des Rats in 2004/108/EC - Richtlinie des Rates und den Vorschriften 2006/95/EC über die Niederspannungsgeräte vorgesehen sind.**
- TECHNISCHE EIGENSCHAFTEN**
- Leistung: 220–240V ~ 50/60 Hz
Leistung: 1200 W
- Der Hersteller behält sich das Recht vor, Design und technische Eigenschaften des Geräts ohne Vorberichtigung zu verändern.**
- Die Nutzungsdauer des Geräts beträgt 3 Jahre**
- Gewährleistung**
- Ausführliche Bedingungen der Gewährleistung kann man beim Dealer, der diese Geräte verkauft hat, bekommen. Bei beliebiger Anspruchserhebung soll man während der Laufzeit der vorliegenden Gewährleistung den Kaufcheck oder die Quittung über den Ankauf vorzeigen.
- Das Gerät ist für den Gebrauch im Haushalt geeignet**
- Technische Spezifikationen**
- Netzspannung: 220–240V ~ 50/60 Hz
Leistung: 1200 W
- Der Hersteller behält sich das Recht vor, Design und technische Eigenschaften des Geräts ohne Vorberichtigung zu verändern.**
- Die Nutzungsdauer des Geräts beträgt 3 Jahre**
- Garantie**
- Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.
- THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY**
- SWITCHING HOT AIR BRUSH ON**
- Before switching the unit on, make sure that your home mains voltage corresponds to the unit voltage.
 - Unplug the power cord completely.
 - Insert the power plug into the socket.
 - Use the switch (1) to set the necessary operating mode:
 - the hot air brush is off;
 - «cool shot» mode;
 - warm air supply for hair drying and soft styling;
 - hot air supply for quick hair drying and complex hair-styling;
- Thermal brush (3)**
- Use the thermal brush (3) for styling.
- Put the attachment to the unit body, pressing it till clamping. The arrow mark on the attach-

DEUTSCH

KONTAKT

DEUTSCH

